



***the Jet-gel<sup>®</sup>***



**LIBRETTO D'ISTRUZIONI** (I)  
**OPERATING INSTRUCTIONS** (GB)  
**BETRIEBSANLEITUNG** (D)  
**INSTRUCCIONES DE MANEJO** (E)  
**MODE D'EMPLOI** (F)  
**ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ** (RUS)

**KOBRA<sup>®</sup>**



**THANK YOU FOR PURCHASING KOBRA JET-GEL.  
A DISPENSER DESIGNED TO SANITIZE HANDS  
ELEGANTLY, QUICKLY AND SAFELY.**



**WHEN DESIGN MEETS HEALTH**

### **WARNING - IMPORTANT**

PLEASE READ CAREFULLY THE OPERATING MANUAL AND THE FOLLOWING WARNINGS BEFORE PLUGGING IN KOBRA JET-GEL HAND SANITIZER.

MAKE SURE THAT VOLTAGE AND MAINS FREQUENCY MATCH THE ONES ON THE LABEL PLACED NEXT TO THE POWER CORD BEFORE PLUGGING IN THE HAND SANITIZER.

#### **UNPLUG THE POWER CORD WHEN:**

- **REFILLING THE TANK WITH HAND SANITIZING GEL**
- **IT IS NECESSARY TO DO MAINTANANCE**



REFER TO THE MANUAL



WARNING!  
SAFETY PRECAUTIONS



DO NOT LET CHILDREN  
OPERATE THE GEL  
DISPENSER

### **WHAT'S IN THE BOX**

- The hand sanitizing dispenser: KOBRA Jet-gel
- 500 ml bottle of hand sanitizing gel specifically made to extend the life of KOBRA Jet-gel



**KOBRA Jet-gel: an ideal solution for offices, luxury buildings, luxury stores, airports, lounges, casinos, hotels, resorts, restaurants, bars, private houses, private clubs, fitness clubs, museums, theaters and any other kind of location looking to offer their customers an exclusive experience.**




UNFOLD IT AND SHAPE IT AS YOU WISH



INSTALLATION

After unwrapping the device, place it on a flat surface making sure to be close to an outlet. It is suggested to follow the below steps (see Figure 1) in order to shape the dispenser and give it the height required for your needs. Once reached the desired shape, fill up the tank as explained in the following page "Tank Refill". Finally, plug it in.

Figure 1

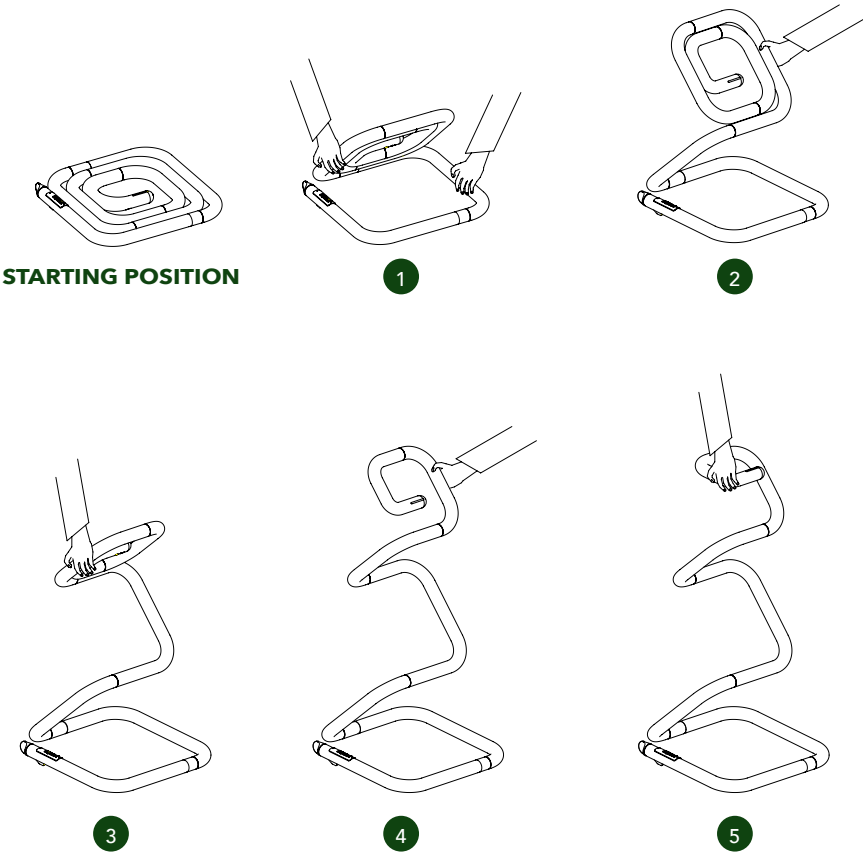


## EFFORTLESS REFILL



## TANK REFILL


Refill tank "A" with the given hand sanitizing gel right after installing KOBRA Jet-gel and before start using it (see Figure 2).

- Lift tank "A".
- Turn the closing cap "B" counterclockwise and remove it.
- Fill up tank "A" with the hand sanitizing gel provided. Do not completely fill up the tank but leave 5 cm from the very end of the tank to avoid the gel to overflow when inserting the closing cap back.
- Insert the closing cap "B" back into the tank hole and turn it clockwise keeping the air intake hole upward .
- Reset tank "A" to its original position.

Power plug must be unplugged when refilling the tank.  
 Plug the power cord back in once the refill is complete. Then, press button "C" once.  
 Now, KOBRA Jet-gel is ready to supply.

Tank capacity: 700 ml.


Figure 2

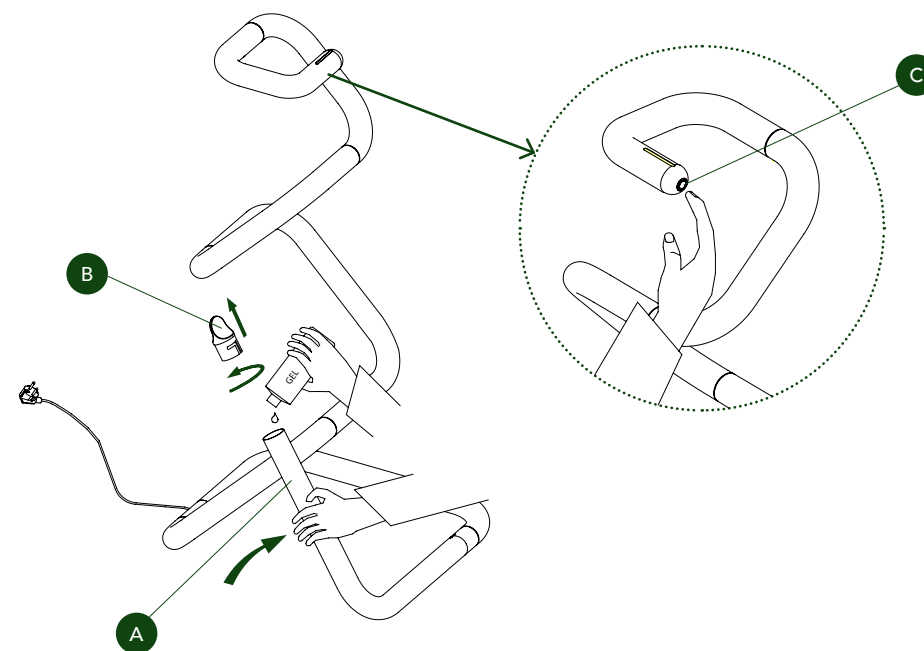

## HOW TO USE

- On/Off Dispenser:  
Press button "C" once (see Figure 3).
- On/Off Projector:  
Press twice (back to back) button "C".  
The project will turn on automatically when turning on the dispenser. If you wish to turn the projector off, press twice button "C".
- **FIRST INSTALLATION ONLY:**  
Press and hold button "C" for approximately 20/30 seconds and at the same time place a hand where the gel is supplied (see Figure 4).  
Release button "C" as soon as the hand sanitizing gel is supplied.  
This procedure is required when the dispenser is installed to fill up the circuit for the first time, speeding up the gel supply or in case the gel is not supplied due to empty circuit.


Figure 3

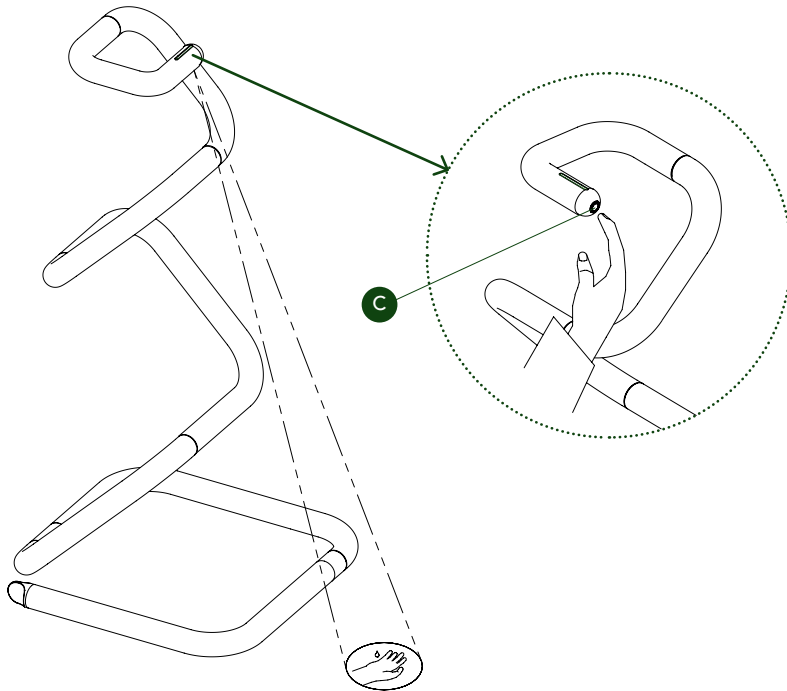

## HOW TO USE

- Hand sanitizing gel supply:  
Place your hand as shown in Figure 4.  
The dispenser will turn off Led "D" when supplying gel and it will turn back on Led "D" as soon as your hand is removed.  
KOBRA Jet-gel is ready to supply gel when Led "D" is steady on.
  - Empty tank warning:  
Led "D" will flash and the dispenser will automatically turn off leaving the led "D" flashing as a reminder to refill the tank.
- Refill the tank and plug in the dispenser.  
Press button "C" once. KOBRA Jet-gel is now ready to supply gel.  
Refer to the previous page "Tank Refill" to learn more about filling up the tank.

Figure 4

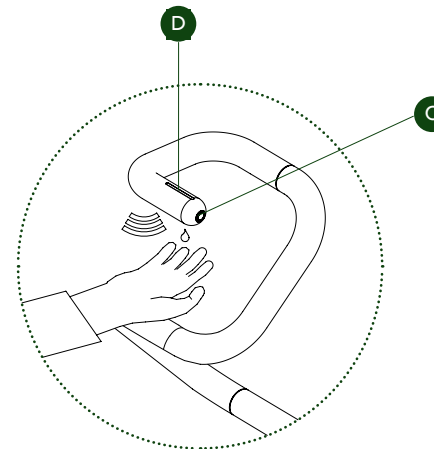

## IMAGE PROJECTOR

Kobra Jet-gel image projector is already equipped with a standard projected image showing a hand along with a drop of gel.



The projector diapositive can be customized on request both before and after the purchase of the device by contacting a KOBRA authorized distributor and by providing the vector graphic of the projected image to be shown on the floor.



## CARE AND MAINTANANCE

It is highly suggested to utilize the authentic hand sanitizing gel KOBRA GEL as it is specifically thought and made to preserve the life of the pumps that provide the gel and therefore, to extend the life of the product. Additionally, KOBRA GEL is made with a mix of substances that leave the skin feeling soft and with a pleasant lemon scent.


KOBRA Jet-gel is made with the highest quality of chromed steel. Please use a microfibre cloth when cleaning the product along with soapy water to avoid unexpected scratches or marks on the chromed surface.

## PRODUCT MALFUNCTIONING

Figure 5

In case no hand sanitizing gel is supplied:

- FLASHING LED → refill the tank
- STEADY LED → hold button "C" until the gel is supplied
- STEADY LED → using a pin, check that the air intake hole on the closing cap is not clogged (see figure 5)

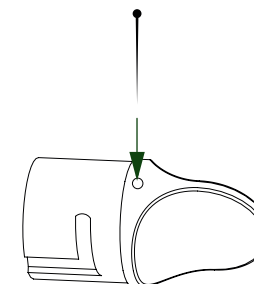

**In case of product malfunctioning, please refer to a KOBRA authorized distributor**